

E-Z On Skirt


It's as easy as 1 2 3

TOOLS NEEDED

- Caulk gun
- Level
- Hammer or Screw Gun

MATERIAL NEEDED


- 8' 2x4
- Construction Adhesive
- Tube of Silicone Caulk

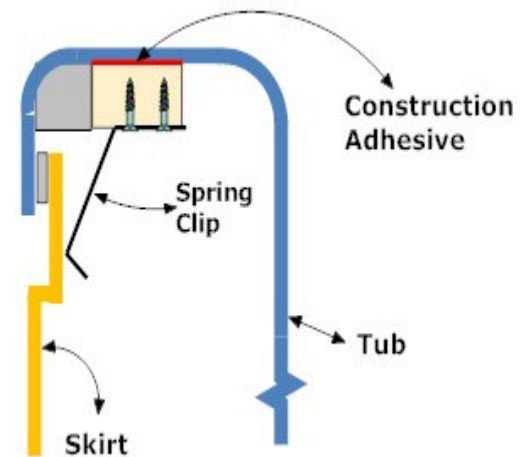

STEP 1 – Install Clips

1. Mark location of clips on tub according to drawing below
2. Put construction adhesive on the back of the wood block
3. Press wood block on to tub
4. Allow adhesive to dry and set in accordance to adhesive manufacture

Clip location on tub

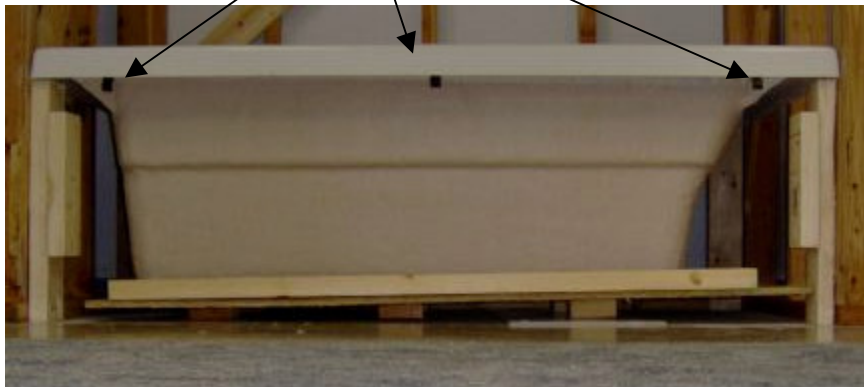


5 foot models – 6 inches from each end and one in the middle

6 foot models – 6 inches from each end and two spaced equally in the middle


STEP 2 – Install side and bottom wood blocks

- Glue or screw 4 foot long 2 x 4 to the floor or tub base
- Nail or screw a 2 x 4 to existing wall studs on both left and right side of tub
- Position ALL 2 x 4 blocks 3/8 of an inch from face of tub (see diagram)

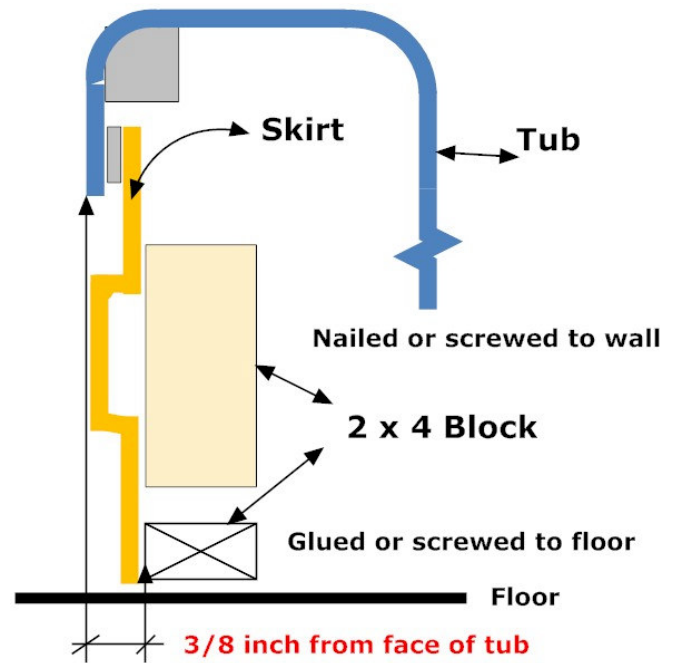

Location of Wood Blocks

- Left Side Block →
- Right Side Block →
- Bottom Block →

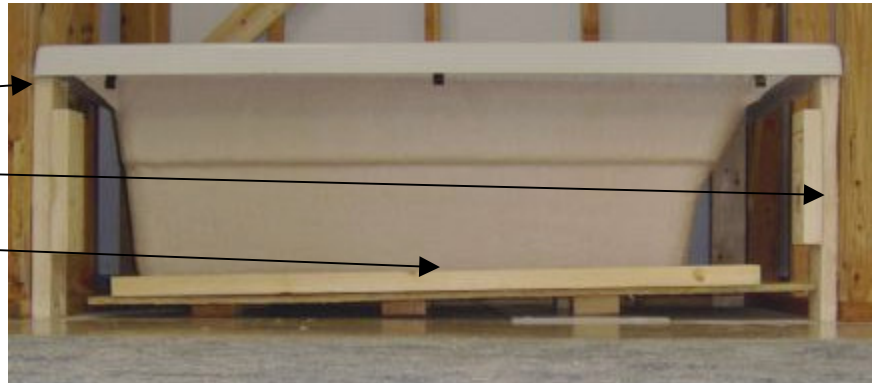

STEP 3 – Install Skirt

- Put silicone caulk on the bottom and side blocks
- Place the skirt at an angle to the floor and resting on the edge of the clips (see diagram)
- Apply pressure to top of the skirt with both hands so the position of the skirt is just under the edge of the tub
- With your knee, push the bottom of the skirt towards the tub until the skirt is touching the bottom and side blocks

Note :
Allow the silicone to dry before disturbing the skirt.

YOU'RE FINISHED

